



Description	: Zero surface
Tanım	: Sıfır zemin
Size / Ebat (cm)	: 120x80
Height / Yükseklik (cm)	: -
Weight / Ağırlık (kg)	: 19
Front Panel Weight (kg)	
Ön Panel Ağırlığı (kg)	: -
Side Panel Weight (kg)	
Yan Panel Ağırlığı (kg)	: -





1

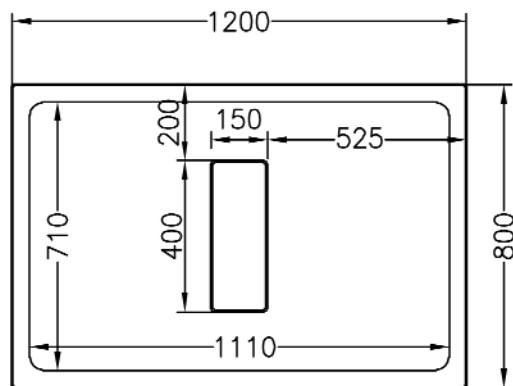

Plan


2

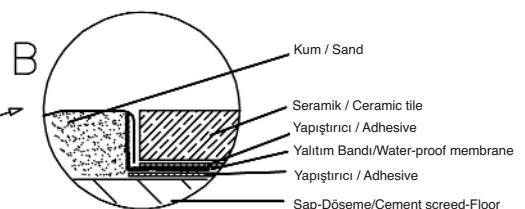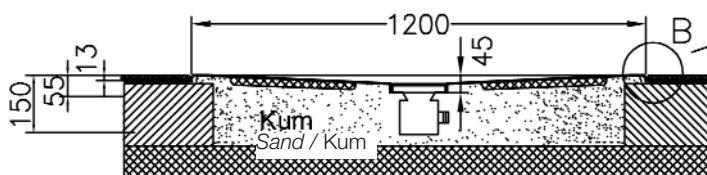Section  
Kesit**Points to notice:**

- For built-in installations, a low floor application of 15 cm is required for the installation for the siphone and the depth of the shower tray.
- As the water proof membrane should be placed below tiles, the assembly of the shower tray should be done at the same time with tiling.
- Leg set and panels are not used with zero surface shower trays.
- User Manual is delivered with the product.

**Dikkat Edilecek Noktalar:**

- Montaj uygulamasında duş teknesi derinliği için 15 cm.'lik düşük döşemeye ihtiyaç vardır.
- Sıfır zemin olması dolayısıyla, su sızdırma parçasının seramik altında olması gerekmektedir. Bu yüzden montajı seramik ile birlikte yapılmalıdır.
- Sıfır Zemin Duş Tekneleri'nde ayak ve panel uygulaması bulunmamaktadır.
- Garanti Belgesi ve Kullanım Kılavuzu ürün ile birlikte verilen poşet içerisinde yer almaktadır.

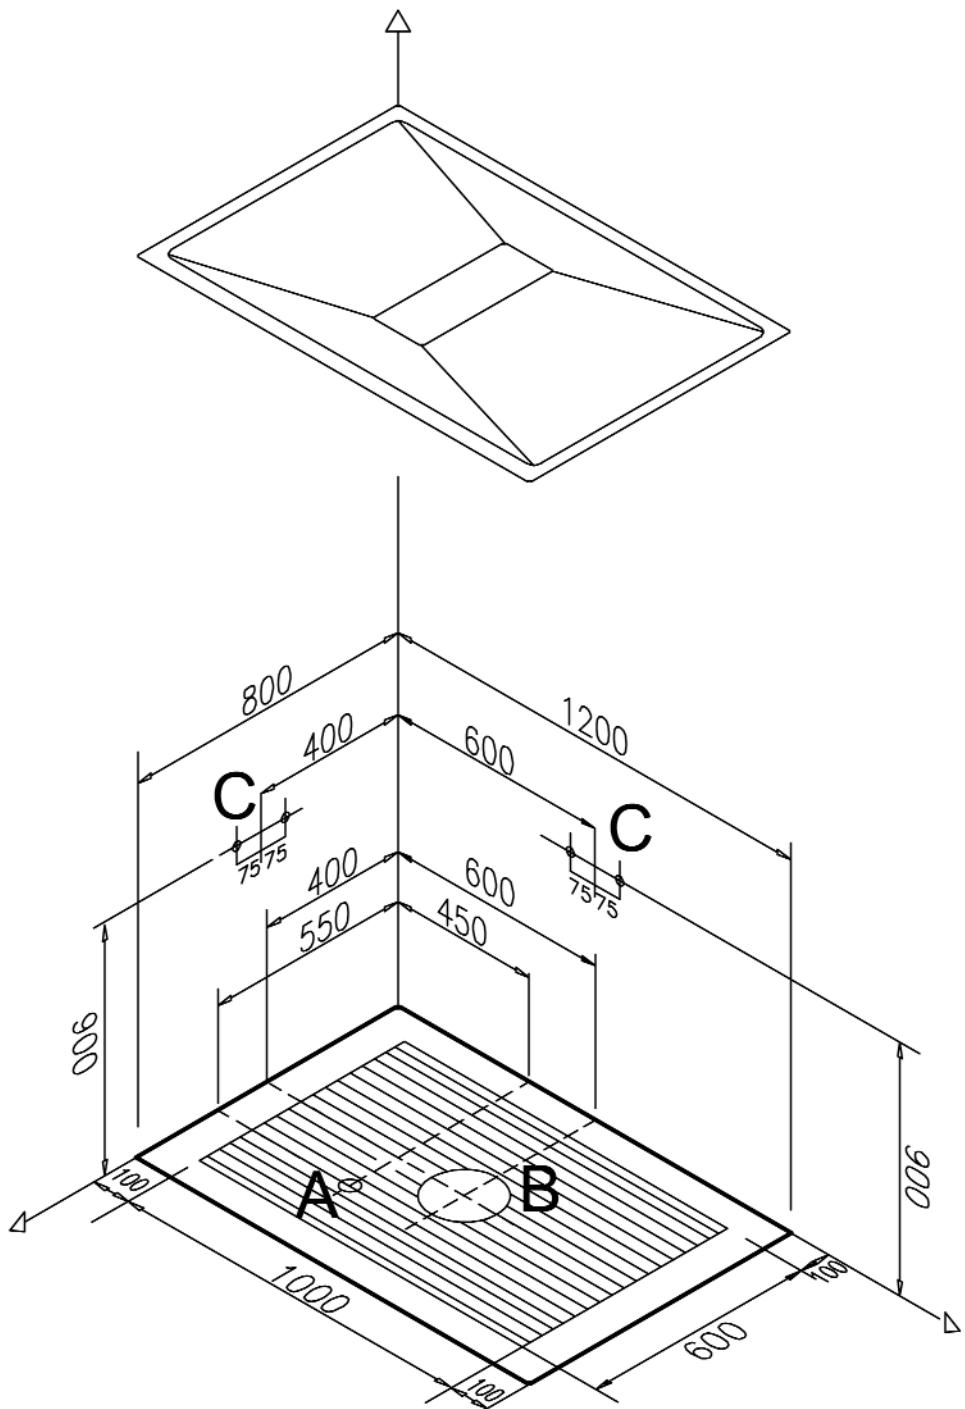

Perspective  
Perspektif görünüş

#### GB

- N** : The area where the waste outlet ( $\varnothing$  50 mm) can be placed in.
- A** : Ideal position of the waste outlet ( $\varnothing$  50 mm). The end point of the waste outlet should not be cut out, and should be left at least 50 mm above the surface.
- B** : The area ( $\varnothing$  200 mm) where the waste outlet should not be left.
- C** : Hot & cold water inlet for the wall taps.

There is no need to leave additional space for the silicone during the installation process. It is enough to prepare the required area according to the size of the product.

#### TR

- N** :  $\varnothing$  50 mm. çapında gider mufunun bırakılacağı alan
- A** :  $\varnothing$  50 mm. ideal gider deliği. Gider muf ucu kesilmemeli ve döşemenin en az 50 mm. üzerinde olacak şekilde bırakılmalıdır.
- B** :  $\varnothing$  200 mm. çapındaki alana kesinlikle gider mufu bırakılmamalıdır.
- C** : Duvardan bateria için sıcak - soğuk su çıkış ölçülerı.

Montaj sırasında silikon için ek pay bırakılmasına gerek yoktur.  
Ürünün ebadi dikkate alınarak gereken alanın hazırlanması yeterlidir.